








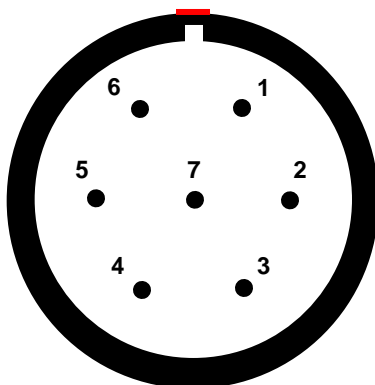
The TDAS PLUS Manual Trigger Device is a simple device used to issue start/record and event/trigger signals to the attached DAS.



			
	DAS armed; waiting for trigger	START/RECORD signal sent to DAS	
			Trigger received

	
Momentary; sends START signal to DAS	Momentary, sends EVENT signal to DAS

**7-pin CONTROL connector**  
(FGG.2B.307.CLADxx)



(looking into the connector)

Pin	Function
1	+ Start record
2	- Start record
3	No connection
4	- Status output
5	+ Status output
6	+ Event (contact closure to pin 7)
7	- Event (contact closure to pin 6)