









The SLICE USB Interface connects 1 SLICE system to a PC via USB.




		
	Correct input power applied	
		SLICE system is on
		
		SLICE system is recording data
		

\* You must pull out on the switch before moving—do not force.

**SLICE USB Interface (UI)**


**SLICE**  
(ECG.2B.312.CLL)

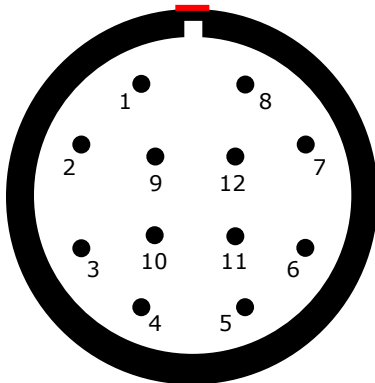

(panel view)

Pin	Function
1	/ON
2	/START
3	/EVENT
4	STATUS
5	12.6 VDC out
6	12.6 VDC out
7	Ground
8	Ground
9	USB power
10	USB_DP
11	USB_DM
12	Ground


**AUX**  
DB15F (high density)

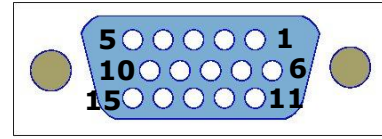

(panel view)

Pin	Function
1	/START, CC to ground
2	+Status out
3	/EVENT, CC to ground
6	Ground
7	-Status out
8	Ground

**15V IN**  
(ECG.2B.304.CLL)

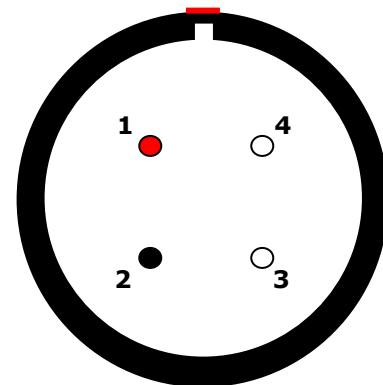

(panel view)

Pin	Function
1	+Power (15 VDC)
2	-Power/Ground
3, 4	Ground



This is a standard USB ("B") interface. A commercial, off-the-shelf USB cable is acceptable.